

900 Table Base & Teak Top Assembly

Parts List

(1) Rod
(1) Nut
(8) Bolts
(1) Spider
(1) Column
(1) Base
(1) Table Top


Tools List

(1) Socket
Wrench

(1) 3/8" Socket
Head



1.

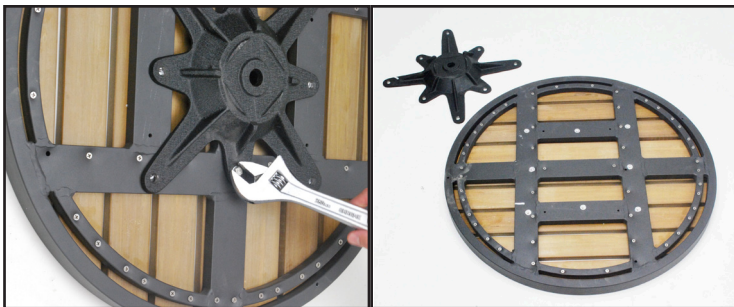


Use wrench to remove spider from table top.

2.



Slide rod through top of spider

3.

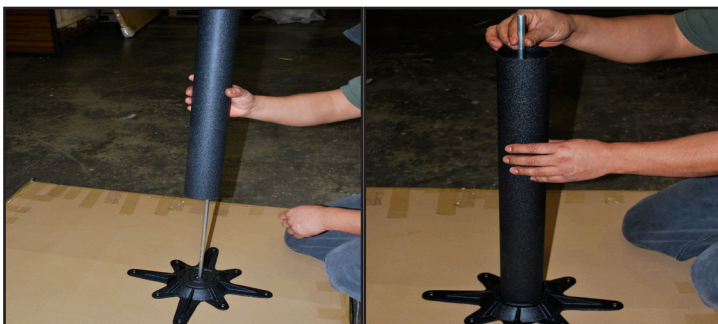

Place Column over rod

4.



Flip base upside down and guide rod through base's center hole



5.




Connect base to column by tightening nut. Use ratchet or wrench to completely tighten base together.

6.



Place base on bottom side of table top. Be sure that marks on spider match marks on table top, as seen in picture above.

7.

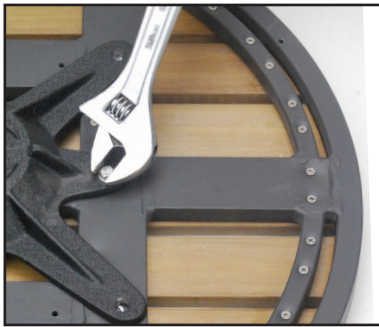

Once spider is lined up with table top, use bolts and ratchet/wrench to attach base to table top. When all 8 bolts are fastened, flip over for finished product.

