

FRANZ BASE ASSEMBLY

Great conversations start here.™

PARTS LIST


- (1) Nut
- (1) Tie Rod
- (1) Spider
- (1) Column
- (1) Base

TOOLS LIST

7/16" Socket Wrench
With Extension



1

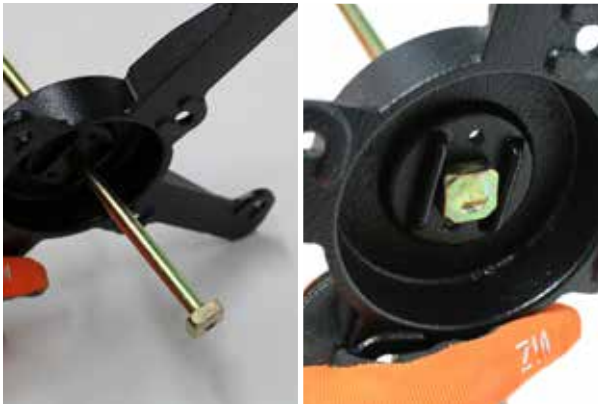

SLIDE TIE ROD THROUGH SPIDER MAKING SURE THE BOLT SIDE SITS IN BETWEEN THE TWO LOCK NOTCHES.

2



PLACE TIE ROD AND SPIDER ON GROUND OVER PIECE OF CARDBOARD OR RAG TO KEEP THE TIE ROD FROM FALLING OUT OF LOCK NOTCHES

3



SLIDE COLUMN OVER TIE ROD AND REST ON SPIDER.

4



PLACE BOTTOM OF BASE OVER TIE ROD AND CENTER IT ONTO THE COLUMN

5



FINGER TIGHTEN THE NUT ONTO TIE ROD UNTIL SNUG.

6



FINISH WITH THE 7/16" SOCKET WRENCH. HOLD BASE WITH OTHER HAND TO FIRMLY TIGHTEN .



FINISHED BASE IS NOW READY TO BE ATTACHED TO TABLE TOP.



Great conversations start here.™

1 (800) 424-2477 GARPRODUCTS.COM SERVICE@GARPRODUCTS.COM

Hour of Operation: 9:30am to 5:00pm EST Tel: 732.364.2100 Fax: 732.370.5021