




Wagon Wheel Footrest Assembly

Parts List

- (1) Wagon Wheel
- (1) Column
- (4) Set Screws
- (1) Allen Key

Tools List

- Allen Key

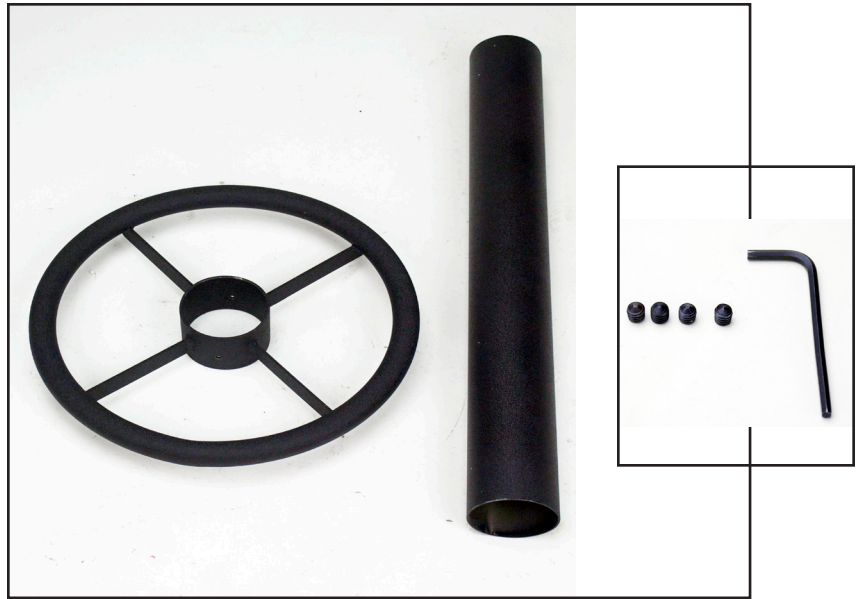

1.



Slide wagon wheel down column to desired height.

2.



Hand screw set screw into hole.

3.



Tighten completely with allen key. Take remaining set screws and repeat steps 3 & 4 for completion.





Constructed Wagon Wheel Footrest

