
GAR
PRODUCTS
EST.1956

COSMO BASE ASSEMBLY

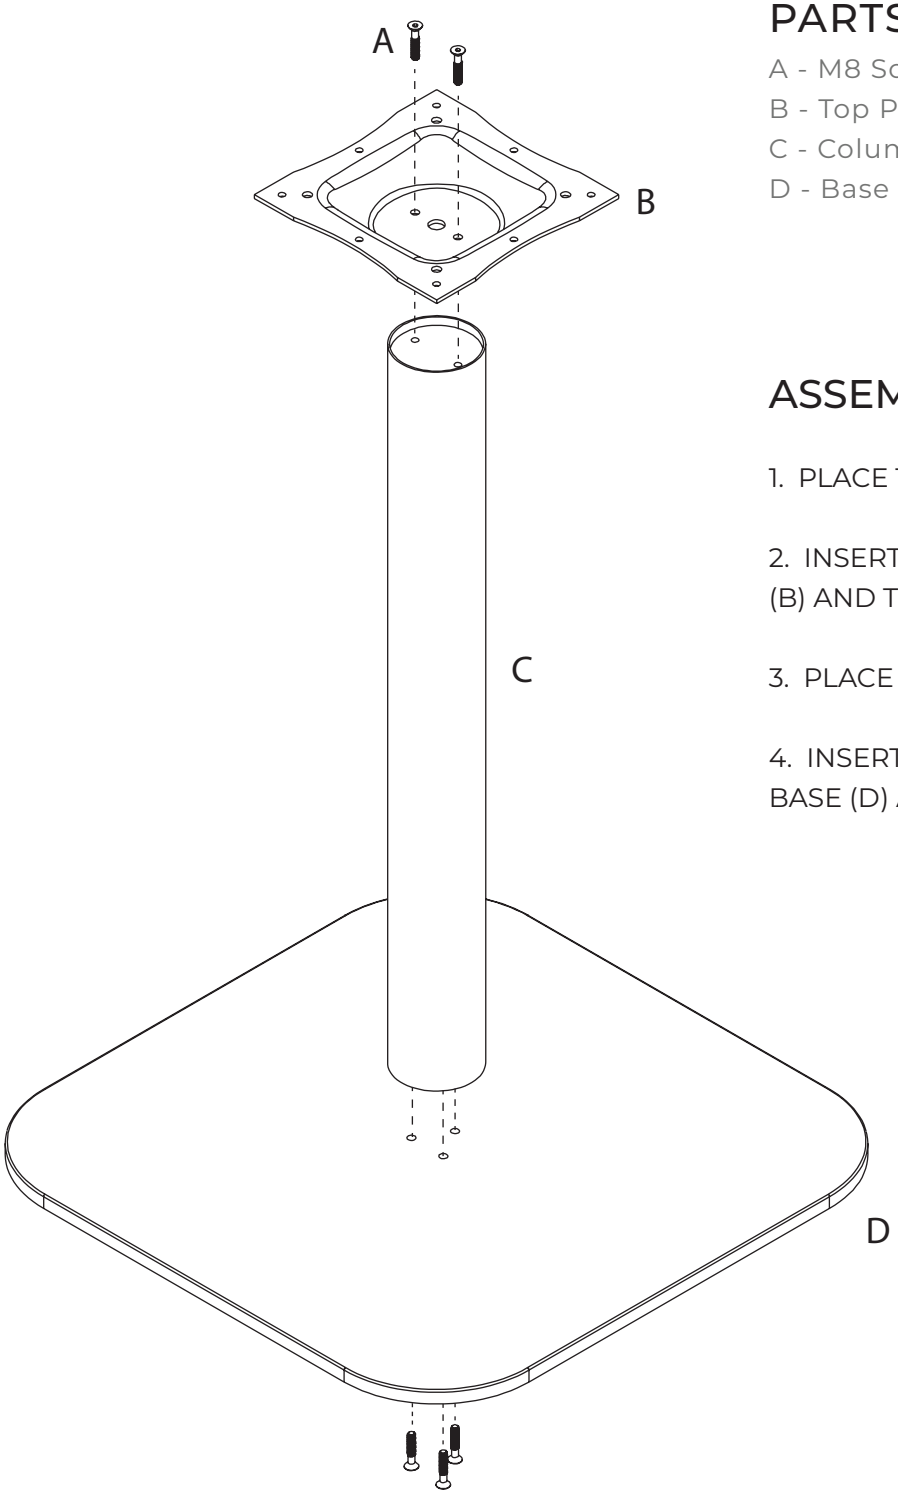

PARTS LIST

A - M8 Screw (5)
B - Top Plate (1)
C - Column (1)
D - Base (1)

TOOLS LIST

5mm Allen Key

ASSEMBLY STEPS

1. PLACE TOP PLATE (B) ON COLUMN (C)

2. INSERT M8 SCREW (A) THROUGH TOP PLATE (B) AND TIGHTEN

3. PLACE TUBE (C) ON THE BASE (D)

4. INSERT M8 SCREW (A) THROUGH THE STEEL BASE (D) AND TIGHTEN

1 (800) 424-2477 GARPRODUCTS.COM SERVICE@GARPRODUCTS.COM

Hour of Operation: 9:30am to 5:00pm EST Tel: 732.364.2100